



## Row Definitions

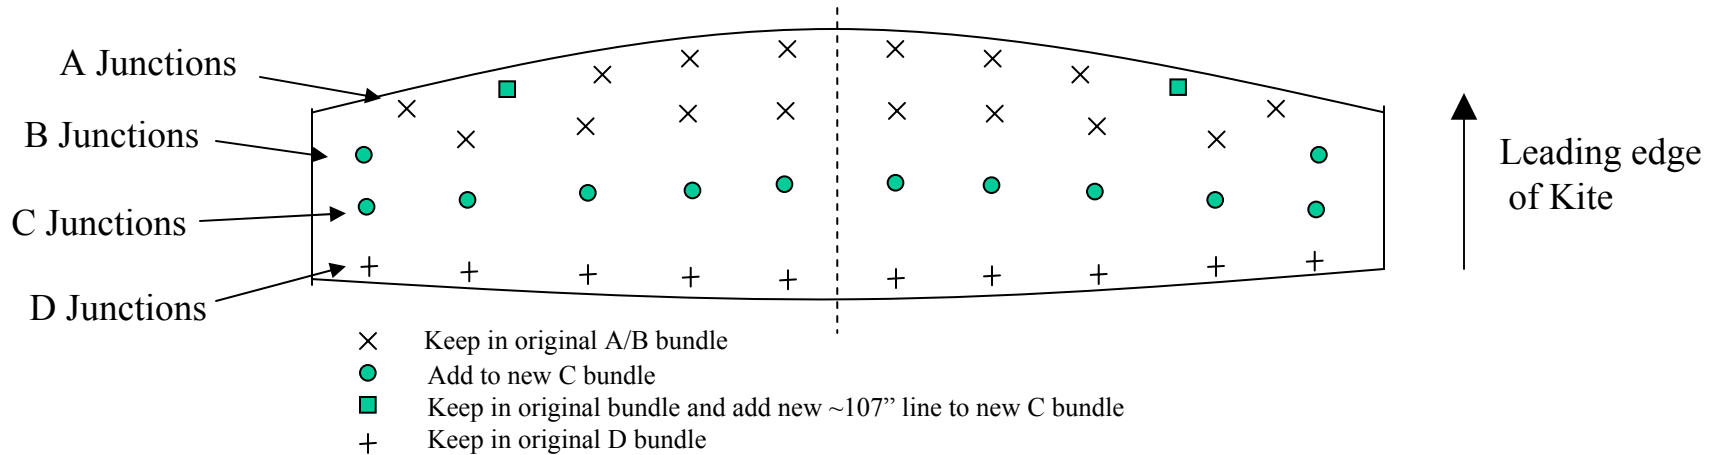

## Setup

1. Disconnect all C's and the most lateral B from bundle
2. Use 7" line to bundle lines from 1 above.
3. Add new ~105" line from 2<sup>nd</sup> lateral A junction to bundle from 2 above. Do not remove original A line from A/B bundle.
4. Using 3.5" line, connect new bundle to original D leader ~37" down from D bundle
5. Add figure 8 knot on D leader as close to connection from 4 above as possible for connecting steering lines
6. Repeat for other side of kite
7. Fly kite and fine tune length of item 3 above. It should be slack except during aggressive turning.

## Right Side View

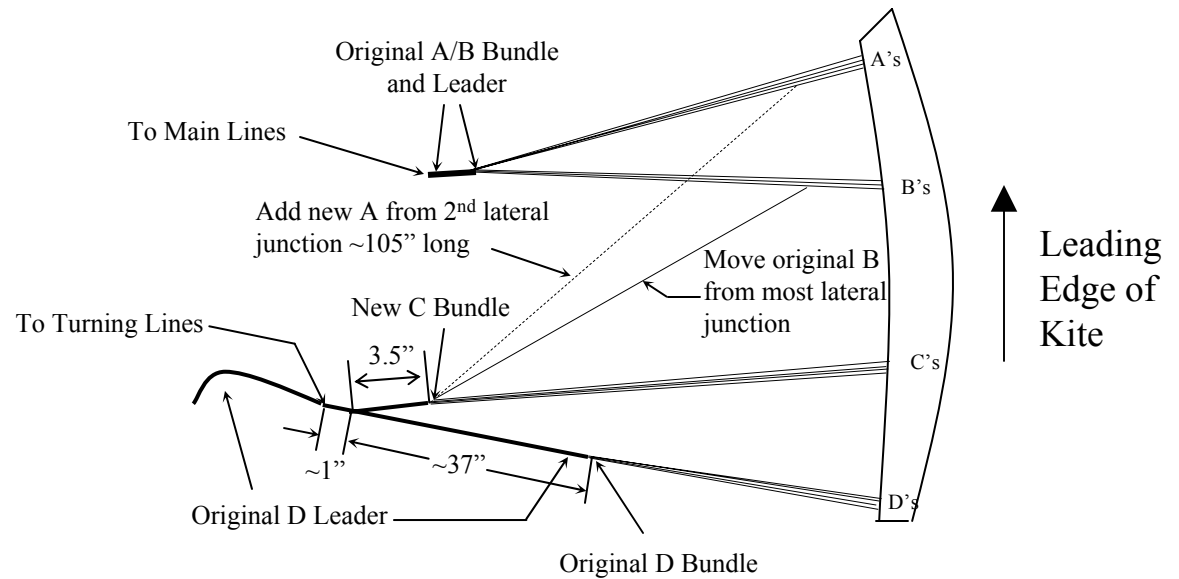

# Super Blade III 10.5